



## **BUILD IN APPLIANCES**


### **Argent Sink Models SK1000, SK1100, SK1200**



## **INSTALLATION INSTRUCTIONS**


**THETFORD LIMITED,  
19 OAKHAM DRIVE,  
PARKWOOD IND. EST.  
SHEFFIELD S3 9QX, ENGLAND.  
TEL: + 44 (0) 114 273 8157    FAX: + 44 (0) 114 275 3094**

Fig. 1. Fixing Details

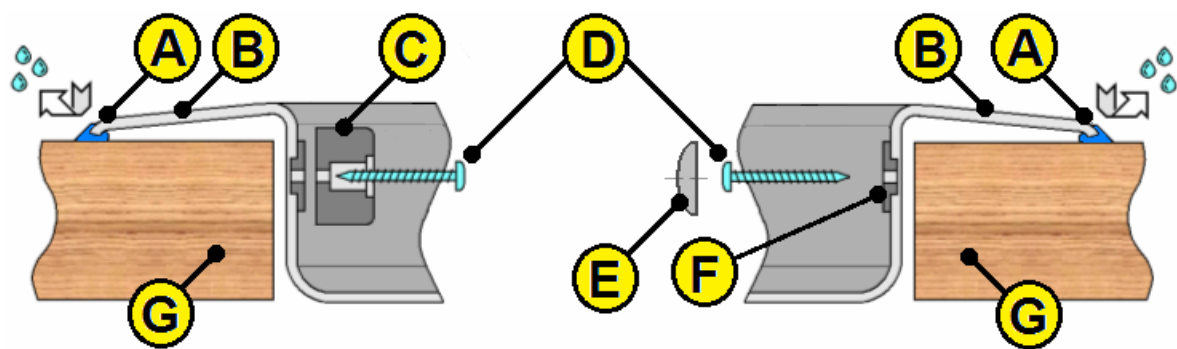

A	OPTIONAL SEAL	B	SINK PRESSING
C	GLASS LID BUMP STOP	D	WOODSCREW (UK No 6)
E	NYLON CAP	F	NYLON WASHER
G	WORKTOP		

Fig. 2. Worktop Cut-Out details

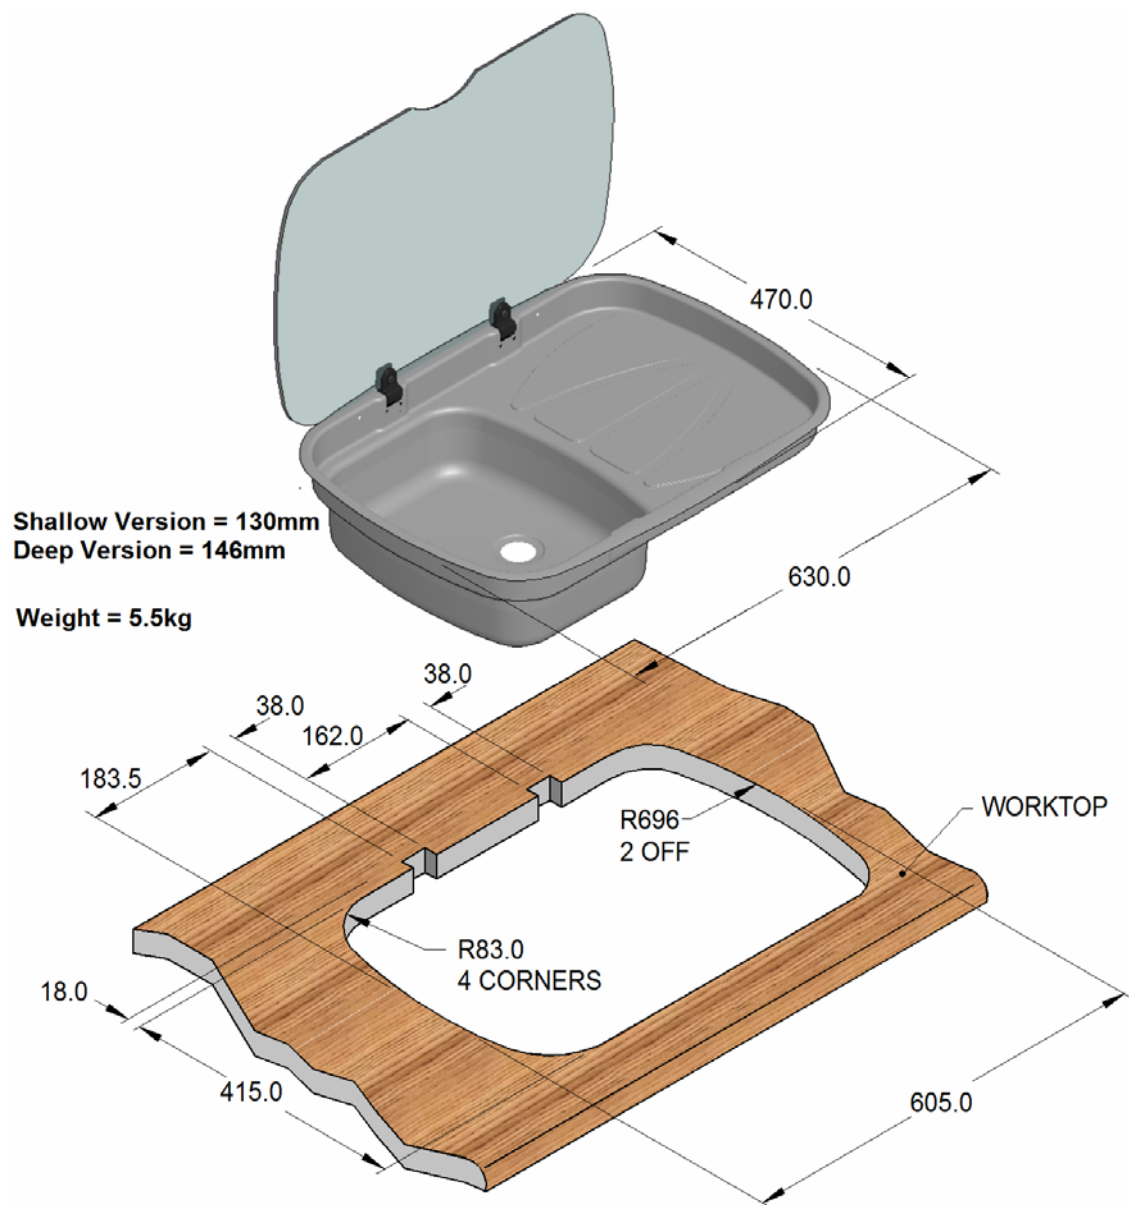

## INSTALLATION INSTRUCTIONS

Flush fitting sink with integral glass lid, with overall dimensions, 630mm x 470mm.

Decide on the location of the sink taking into account the services required, and prepare the worktop for installation as shown in **Fig. 2**.

Supplied with the sink is a silicone rubber seal, which should be fitted to the sink prior to fitting into the aperture. Place the sink into the prepared aperture in the worktop, ensure that the seal is seated correctly, and open the glass lid.

There are 4 fixing positions, 2 on either side of the sink. You may notice that the sink does not sit perfectly flat on the worktop and is slightly higher at either end, this is intentional to ensure a good watertight seal once fitted.

Supplied with the sink in a small plastic bag are the glass lid bump stops, used at the front, and the washers and covers for the rear screws. The front bump stops should be secured with a 25mm long N° 6 woodscrew and the washers at the rear with a 15mm long N° 6 woodscrew. Before screwing the sink in place it is advisable to drill pilot holes into the worktop edge with a 2.5mm drill.

To ensure a good seal, firstly apply pressure in the base of the bowl and drill the front and rear fixing at either side of the bowl, then apply pressure to the drainer and drill the front and rear fixing positions. It is also advisable to slightly angle the drill down so that when the screw is applied it pulls the sink down to the worktop. Take care not to angle the drill by more than about 10° otherwise uneven pressure is applied around the fixing hole when fixing in, which could result in chipping the enamel.

Take care when installing enamel sinks, although the enamel is tough and durable the enamel can be damaged by over-tightening the fixing screws.

To ensure a good seal, firstly apply pressure in the base of the bowl and fix the front and rear fixing at either side of the bowl, as shown in **Fig.1**. Then apply pressure to the drainer side and fix in the front and rear screws in position.

When the sink is fully fixed, clip on the 2 grey domed screw covers at the rear.

## APPLIANCE CARE INSTRUCTIONS

### Stainless Steel

After use always remove any plastic bowl or mat, clean the surface with soap and hot water followed by a clean water rinse and drying with a soft cloth to prevent spotting. For more stubborn dirt or grease a non-abrasive multi-purpose cream cleaner, such as CIF, may be used. To preserve the appearance of your appliance we recommend plastic bowls or mats are not stored in the sink.

The quality of water can affect your sink's appearance. If the water has high iron content, a brown surface stain can form on the sink giving the appearance of rust. Additionally, in areas with a high concentration of minerals, or with over-softened water, a white film may develop on the sink. To combat these problems, towel dry the sink after use, and clean at least once every week .

Surface scratching will be most noticeable on highly polished components, in particular the drainer area of sinks where hard objects are placed. These marks are usually only superficial and can be removed with a proprietary stainless steel cleaner/polish. If the surface has a directional polished grain always clean along the grain and NOT across. Never use wire wool pads to clean the surface.

Cleaning agents containing bleach should not be left in contact with stainless steel. This includes many of the new "trigger-dispense" products and some multi purpose cream cleaners. Also leaving rubber mats or dishpans in the sink can lead to surface rust or pitting, always remove them after use.

### Enamel

After use always remove any plastic bowl or mat, clean the surface with soap and hot water, followed by a clean water rinse and drying with a soft cloth. More stubborn dirt or grease can be removed by using a non-abrasive cream cleaner, such as CIF. To preserve the appearance of your appliance we recommend plastic bowls are not stored in the sink.

Never use abrasive cleaners, wire wool or other cleaning pads as these will scratch the surface.