


Starting from the season 2011 Hobby will replace in the side and front wash room the conventional Thetford C 400 with the new Thetford version C 500. The model for the front wash room will be available only in the right version. For the side wash room however both versions are available (right and left).

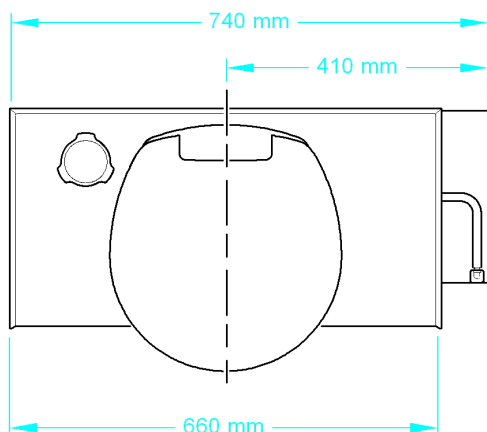


THETFORD
C500

Version front bathroom

Partno. Thetford: 90518

Partno. Hobby:

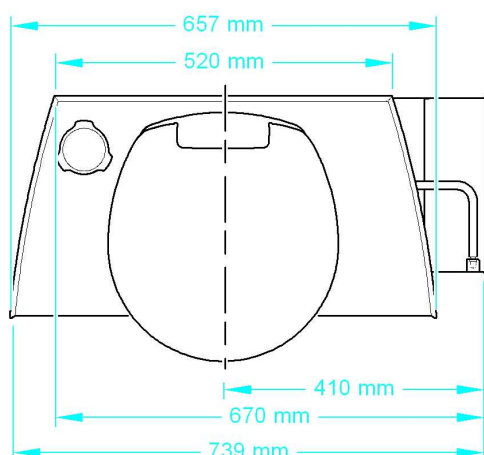


THETFORD
C500

Version side bathroom room left

Partno. Thetford: 90515

Partno. Hobby:

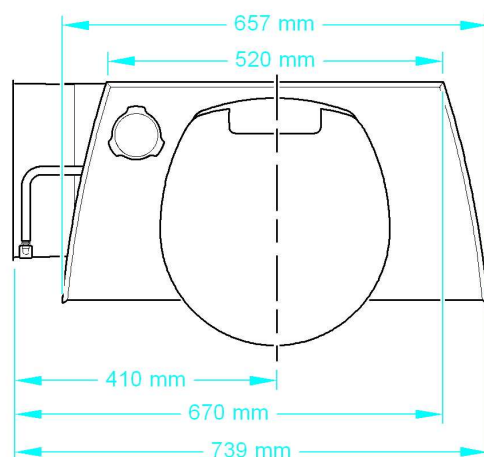

THETFORD
C500

Version side bathroom right

Partno. Thetford: 90519

Partno. Hobby:


Removing the C-500:



Thetford C500 completely installed (side wash room left). To be able to remove the toilet without problems, please follow the steps prescribed below.




First step is to unscrew the lower connections at the cloakroom wall because you have to pull out the wall later on .

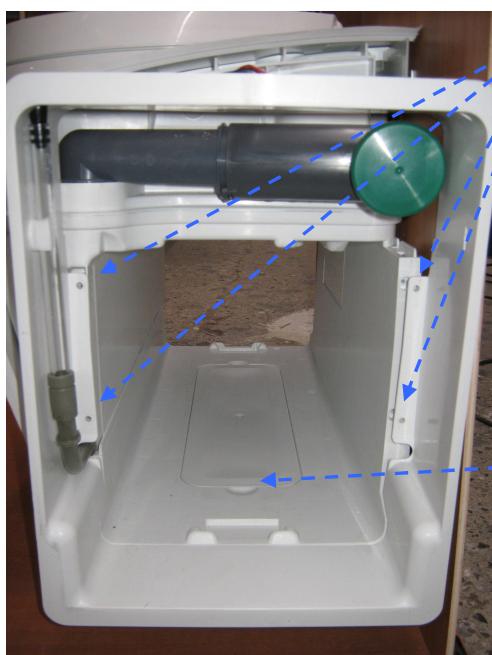

Next step is to unscrew the 4 screws of the tunnel but please don't remove the tunnel! This is necessary to be able to take the cassette out of the washroom later in process.

Then take out the cover at the bottom and unscrew the screws below. The 12V cable must be disconnected from the toilet next.

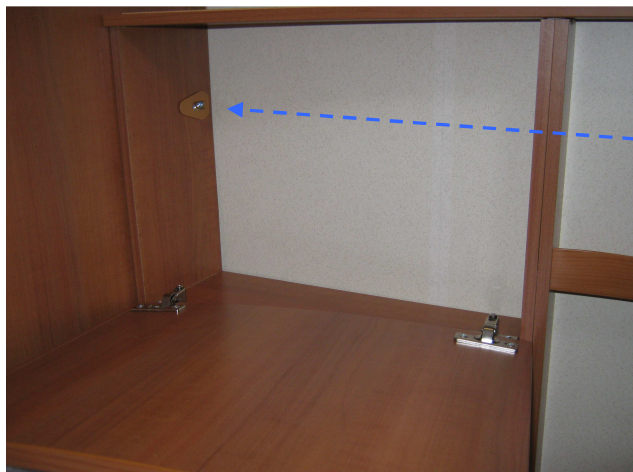

The bottom part of the cupboard in the wash room is divided into segments, that makes the disassembly of the toilet easier. Unscrew the left cabinet element and take it out completely.



After the element of the cupboard has been taken out, the bottom of the cloakroom wall should be pulled out carefully. This is necessary to prevent that the toilet will damage the stop bar of the cloakroom wall. The toilet can now be raised and removed from the washroom.



Please pay attention that before you start with the new installation again the heating and water tubes are placed correctly.